








**GIGAPAN EPIC PRO V/EPIC PRO SHUTTER RELEASE CABLE
COMPATIBILITY CHART**

510-1500revD	<p>Canon E3 cable</p> <p>For Canon Rebel XT, XTi, XS, XSi, T1i, T2, T2i, T3, T3i, T4, T4i, T5, T5i, T6, T6i, T7i, SL1, SL2; Canon EOS R, 80D, 70D, 77D, 60D, 60Da, 760D, 750D, 700D, 650D, 600D, 550D, 500D, 450D, 100D, 200D, 800D, 1300D, 1200D, 1100D, 1000D, 2000D, M5; PowerShot G1X, G1X Mark II, G1X Mark III, G3 X, G5 X, G10, G11, G12, G15, G16, SX60 HS, SX50 HS;</p> <p>• For Pentax *ist D, *ist DL, *ist DS, *ist DS2, K100D, K110D, K200D, K-500, K100D, K20D, K10D, K-30, K-50, K-7, K-5, K-5II, K-5IIs, K-3, K-3II, K 1; Samsung GX-1L, GX-1S, GX-10, GX-20, NX100, NX11, NX10, NX5; Contax 645, N1, NX, N Digial; Sigma Sd1; Fujifilm: GFX 50R, X-T3, X-E1, XF10; Olympus E-M1 Mark II</p>	
510-1501revD	<p>Canon N3 cable</p> <p>Compqatible with Canon EOS-3, 1V HS, 1V, 1D, 1D Mark II, 1Ds, 1Ds Mark III, 1D X, 5D, 5D Mark II, 5D Mark III, 5D Mark IV, 5DS, 5DS R, 6D, 6D Mark II, 7D, 7D Mark II, 10D, 20D, 30D, 40D, 50D, D30, D60, and D2000 cameras.</p>	
510-2500revD	<p>Nikon 10-pin cable</p> <p>Compatible with nikon D5, D4S, D4, D3x, D3s, D3, D2Xs, D2X, D2Hs, D2H, D2, D1X, D1H, D1, D850, D810, D800, D800e, D700, D500, D300s, D300, D200</p> <p>D750 Fuji: S3 and S5</p> <p>Kodak: DCS-14N</p>	
510-2501revD	<p>Nikon MC-DC1 cable</p> <p>For Nikon D70s & D80 DSLR Cameras</p>	
510-2502revD	<p>Nikon MC-DC2 cable</p> <p>Compatible with the nikon cameras which use this connection including the Z6, Z7, D90, D3100, D3200, D3300, D5000, D5100, D5200, D5300, D5500, D5600, D7000, D7100, D7200, D7500, D600, D610, D750, Df, D90 and COOLPIX P7700, COOLPIX P7800, COOLPIX A, COOLPIX P1000</p>	

GIGAPAN EPIC PRO V/EPIC PRO SHUTTER RELEASE CABLE

COMPATIBILITY CHART (continued)

<p>510-3500revE</p>	<p>Sony RM-S1AM cable For older Sony and Minolta cameras featuring the Sony/Minolta remote shutter terminal. Sony a99, a77, a67, a65, a57, a55, a37, a35, a33, a900, a850, a700, a580, a560, a550, a500, a450, a400, a350, a300, a200, a100; Konica Minolta DIMAGE A2, A1, 9, 7Hi, 7i, 7, 5, 4, 3, DYNAX 7D, 5D</p>	
<p>510-3501revA</p>	<p>Cable, Micro USB to Sony S2 Micro 10-pin connector For all newer Sony Cameras including A6000 A5100 A5000 A6500 A6400 A6300 A7 A7 II A7 III A7R A7R II A7R III A7S A7S II A9 RX100 VI V VA IV III RX10 IV III HX400V and More</p>	
<p>510-4500revD</p>	<p>Olympus RM-UC1 cable Compatible with the following models: SP-510UZ, SP-550UZ, SP-560UZ, SP-5655UZ, SP-570UZ, SP-590UZ, EP-1, EP-2, E-PL2, E-P3, E-PL3, E-PM1, E-M5MkII, E-410, E-510, E-520, E-620, E-30, E-M5, E-M10, E-M10 Mark II, E-M1, XZ-1, XZ-2, Stylus 1, SP-100EE, SH-60, SH-50, SH-1, SZ-31MR, SZ-30MR, SZ-20, SZ-14, SZ-11, SZ-10, SH-21, SH-25</p>	